


MEDICAL CONCENTRICITY OF CANNULATED BARS FOR IMPLANTS


CONCENTRICITY CALCULATION FORMULA

	Tubing	FORECREU Biometal
Concentricity	$\frac{(WT_{max} - WT_{min}) \times 100}{2 \times WT_{avg}}$	$\frac{(WT_{max} - WT_{min}) \times 100}{2 \times OD}$
Scale	% of Wall Thickness (WT)	% of Outside Diameter (OD)

Tube

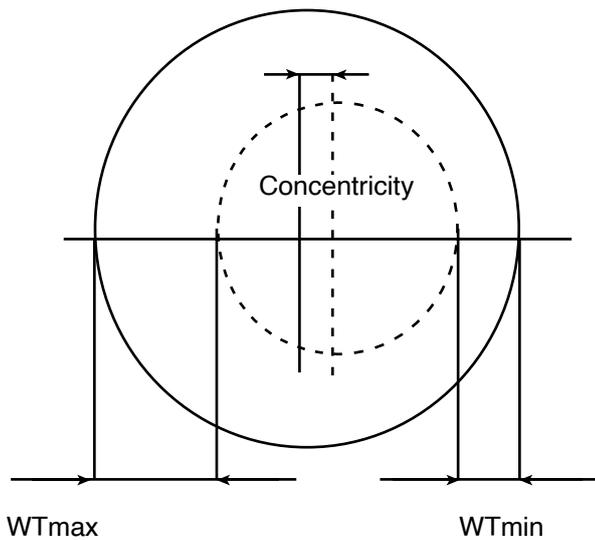

Forécreu Biometal

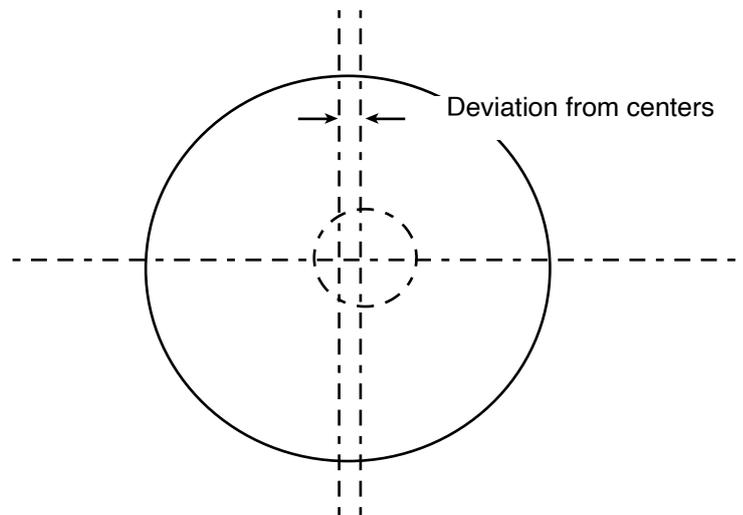

Concentricity %	TUBING		FORECREU Biometal	
	Stainless steels	Titanium alloys	Stainless steels	Titanium alloys
< 0,5	9%	2%	65%	47%
< 1	44%	25%	96%	93%
< 1,2	75%	39%	98%	97%
< 1,6	76%	64%	99%	99%
<2,5	93%	90%	100%	100%
< 5	100%	100%	-	-
Data	386	542	386	542

Please contact our office for any additional information or documentation. Dimensional information and technical drawings in this document are for reference only. Some of the product characteristics indicated in this document may be modified at any time at the company's discretion. Our company is not responsible for the use of our products outside standards prescription and what our commercial documents are indicating.